



Cold Room Monitoring

Monitor and protect your product, wherever you are.

Receive early warning before small issues become big problems. Reduce spoilage and waste.

Maintain a record of temperature compliance.

Monitor when freezer doors are opened.

Use K, J, T, N, S, E, B and R-Type thermocouples connected directly to the ORB-X1.

Connect an optional humidity sensor to the 4-20mA or voltage inputs on the ORB-X1.

Connect door switches directly to the ORB-X1 level inputs.

Wall or panel mount with included mounting brackets.